


# four77 WAYFINDER / DECEPTION PASS


33.5 mm clear-waterslide decal test sheet - print at 100% / Actual Size




10 mm calibration square - verify before cutting decals

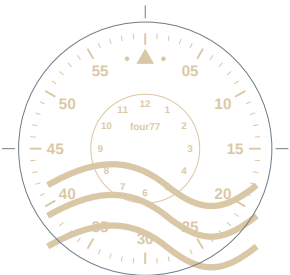

A / warm ivory

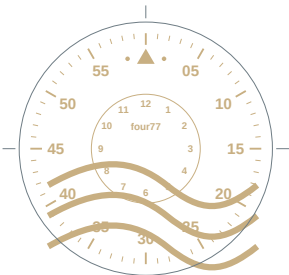

B / darker sand

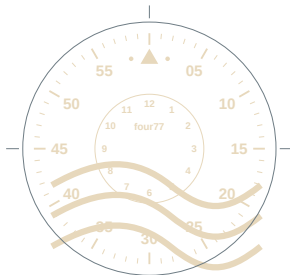

C / pale cream

## COLOR PREVIEW (simulation only - do not use these as clear decals)



A / warm ivory on navy




B / darker sand on navy




C / pale cream on navy

## EXTRA COPIES / TEST PIECES

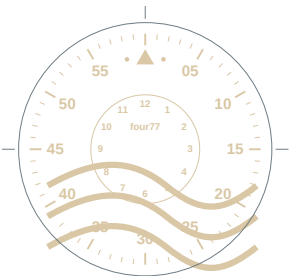

A spare

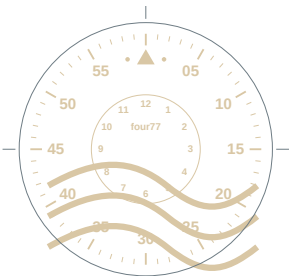

A spare

A / warm ivory

05 10 15 20 25 30

B / darker sand

05 10 15 20 25 30

C / pale cream

05 10 15 20 25 30

ink/color test swatches

## PRINT / APPLICATION NOTES

1. Print at 100% / Actual Size. Disable Fit-to-page. The calibration square must measure exactly 10.0 mm.
2. Use clear inkjet waterslide paper. This sheet intentionally has no navy fill in the printable decal versions.
3. Test the A/B/C swatches over a Deception Pass-navy painted scrap first: normal inkjet inks are translucent over dark paint.
4. Seal inkjet decals with several mist coats before soaking. Apply the dial as one circular decal and clear-coat only after fully dry.